
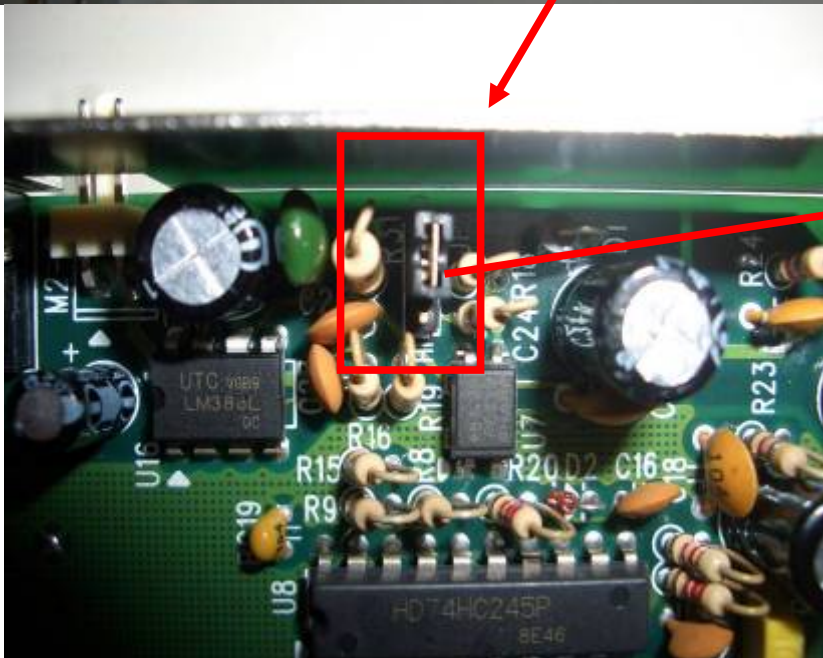


C07-3 C 卡調整音量大小
Adjust the volume for C card

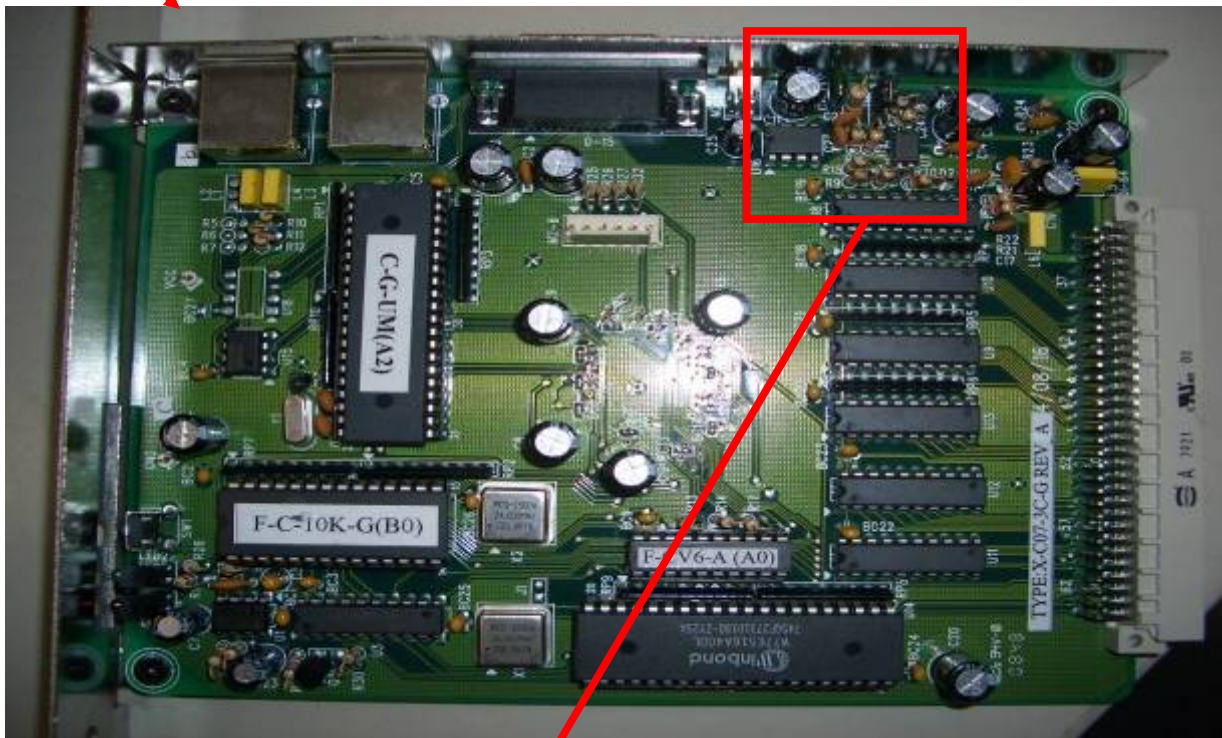

此處可調整音量大小
例:原 1&2 腳有插
JAMP，請將 JAMP 拔起
插至 2&3 腳

Adjust the volume form
here. Please take off the
original JAMP in pin 1
and 2. Then JAMP plugs
in pin 2 and 3.